

## Strong - Power 750ml Eyeglass Household Ultrasonic Cleaner Bath Digital Screen

Our Product Introduction

### Basic Information

- Place of Origin: China (Mainland)
- Brand Name: Skyemen
- Certification: CE RoHS FCC
- Model Number: JP-900S
- Minimum Order Quantity: 60pcs
- Price: Negotiation
- Packaging Details: 1pcs / color box (30\*20\*20cm), 12pcs / carton (56\*53\*38cm)
- Delivery Time: In Stock
- Payment Terms: L/C, T/T, Paypal
- Supply Ability: 6000pcs per month




### Product Specification

- Display: Digital Screen
- Tank Size: 155\*95\*52mm
- Ultrasonic Power: 35W
- Timer: 5 Digital Time Setting
- Color: Grey Lid
- N.W.: 0.82kg
- Shell Material: ABS
- Highlight: **small ultrasonic cleaner, ultrasonic vegetable cleaner**



### More Images

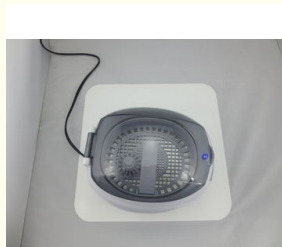

for more products please visit us on [skymenultrasonic.com](http://skymenultrasonic.com)

## Product Description

### Strong - Power 750ml Eyeglass Household Ultrasonic Cleaner Bath Digital Screen

#### Why Ultrasonic Clean

##### 1. Why we need eyeglass ultrasonic bath?

Eyeglass is so important to those who has weak eyesight.They can not see beautiful thing clearly.Even they can not recognize familiar people in long distance.

These problem will also happen if your eyeglass is dirty.There are many blind hole on eyeglass,especially on the edge of eyeglass lens.

We can not use hand to clean those dirt out from there but we can easily do that with a ultrasonic cleaner.It will provide detail care for your eyeglass in all direction.

#### How It Work

##### 2.How ultrasonic bath work for eyeglass.

Ultrasonic cleaners are useful for eyeglass cleaning and removing dirt. They use ultrasound waves and chemicals combined to create bubbles that "cling" to the foreign particles such as dirt, oil, and unknown substances. The high frequency waves are sent out and pull the contaminants off the object. The bubbles collapse after they attach to the contaminants and move to the surface of the chemical solution creating what appears to be a boiling solution.

#### Where Use

##### 3.Eyeglass Ultrasonic Cleaner Application Area

- (1) Eyeglass Shop Daily Cleaning.
- (2)As personal cleaning machine at home,
- (3)Eyeglass repair shop daliy cleaning
- (4)As a gift to your customer or beloved one.
- (5)Eyeglass making industry Daily Cleaning.

#### How To Clean

##### 4.How To Clean Eyeglass With Skymen Ultrasonic Cleaner

- (1) Fill tap water and some chemical you need in cleaning tank lower than MAX line.
- (2) Put your eyeglass in cleaning basket and put basket in water but do not let water cover over Max line
- (3)Turn on ultrasonic cleaning button and set working time from several minutes.(Exact time depends on how dirty)
- (4)When cleaning is finished, put out your basket with eyeglass.
- (5)Turn off all function if you need to stop cleaning and dry cleaning tank .

#### Features

##### 5.Features of JP-900S

- (1)Have suitable size for eyeglass cleaning
- (2)Watach frame is equipped for other cleaning
- (3)5 times digital time setting to meet your different cleaning requirement.
- (4)Suitable frequency for eyeglass.

#### Specification

##### 6.Specification

Model	JP-900S	Frequency	42,000Hz
Tank capacity	750ml	Timer	5 digital time setting
Tank size	150*125*45mm	Unit size	200*175*145 mm

Box packing	250*220*210mm	Function	Blue Light
Ultrasonic power	35W		
N.W.	0.926kg	G.W.	1.38kg
POWER SUPPLY	AC 100 ~ 120V, 60Hz ; AC 220 ~ 240V, 50Hz		

## Packaging & Shipping

### 7.Packing and deliverr information,



### Detailed Picture

### 8.Detailed picture

Breif introduction:

## ULTRASONIC CLEANER WITH LCD DISPLAY



### JP-900S ULTRASONIC CLEANER WITH LCD DISPLAY

- ! Materials: ABS, AS, 304 Stainless steel
- ! Power: 50W
- ! Frequency: 42K HZ
- ! Tank Capacity: Total 750ml
- ! 5 Timers: 01'30", 03'30", 04'30", 06'00", 07'30",
- ! Unit Size: 206\*175\*147mm
- ! Pkg: 6pcs/ctn; 615\*255\*415mm
- ! N.W./G.W: 7.2/8.0kgs
- ! Load Qty: 2580pcs/20',  
5538pcs/40',  
6000pcs/40HQ



### 9. Other recommendation:

If this tank size is not suitable for your jewelry cleaning, we have other smaller or bigger machine for you to choose. Please check other model below:

### SPECIFICATION

Model	JP-020T	JP-030T	JP-031T	JP-040T	JP-050T	JP-060T	JP-070T	JP-080T	JP-100T
Frequency(KHz)	40	40	40	40	40	40	40	40	40
Transducer(PCS)	2	3	3	4	5	6	8	8	10
Capacity(L)	3,2	4,5	6,5	10	14,5	15	20	22	30
Tank size(MM)	240*135*100	300*150*100	300*150*150	300*240*150	300*240*200	300*300*150	300*300*200	500*300*150	500*300*200
Unit size(MM)	265*165*220	325*180*225	325*180*280	325*265*280	325*265*330	360*325*285	360*325*335	530*325*285	530*325*325
Heating power(W)	100	200	200	200	200	300	300	500	500
Ultrasonic power(W)	120/60	180/90	180/90	240/120	300/150	360/180	480/240	480/240	600/300
Timer(MIN)	0-30	0-30	0-30	0-30	0-30	0-30	0-30	0-30	0-30
Temperature ( ° C )	0-80	0-80	0-80	0-80	0-80	0-80	0-80	0-80	0-80

### 10. Skymen Policy For Distributor

We are only specializing in designing and producing ultrasonic cleaner so we need our partners in medical industry, always!

We will keep our quality and competitive price for our distributor.

If you would like to cooperate with us, please contact me directly.

### 11. Skymen Advantage

We have been in this industry for 10 years and we are supplying machines to all seller all over the world. All distributor is welcome for win-win cooperation.

We have passed ISO, High Tech Company, CE, RoHS, FCC, National Medical Instrument Approval.



Skymen Technology Corporation Limited

☎ 86-755-27094405

✉ info@skymen.cc

🌐 skymenultrasonic.com

Floor 1st & 2nd, Building 3, Tanggang Taifeng Industrial Park, Dawangshan Community, Shajing Street, Bao'an District, Shenzhen